

 
 

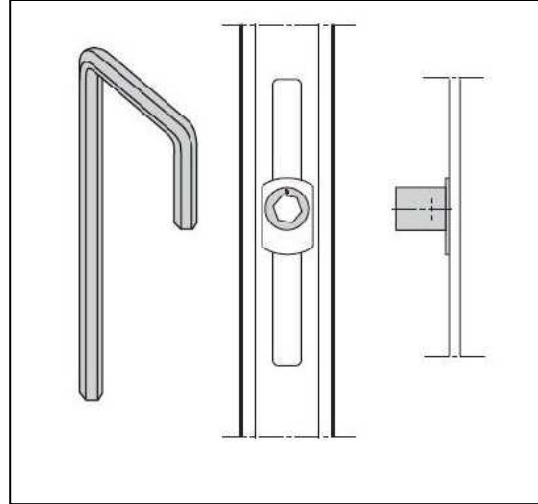




 
 

Afstellen van sluitnokken

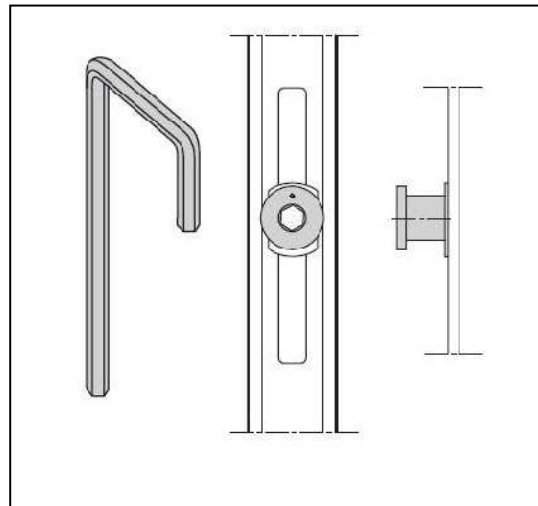
Sluitnokken (E)

Stelbereik in °	Aandrukverstelling in mm.	Hoogte verstelling In mm.
	-	NVT
	+/- 0,8	NVT
	NVT	NVT
	NVT	NVT
	NVT	NVT



 
 



Sluitnokken (P)

Stelbereik in °	Aandrukverstelling in mm.	Hoogte verstelling In mm.
	-	NVT
	+/- 0,8	NVT
	NVT	NVT
	NVT	NVT
	NVT	NVT



Sluitnokken (V)

Stelbereik in °	Aandrukverstelling in mm.	Hoogte verstelling In mm.
	-	-
	+/- 0,8	+/- 0,2
	-	+/- 0,4
	+/- 0,8	+/- 0,6
	-	+/- 0,8

